




acoustical systems

# SMARTractor<sup>®</sup>

Universal high-precision triangular positioning & alignment instrument for optimized analog phono tonearm alignment & true one-point cartridge set-up

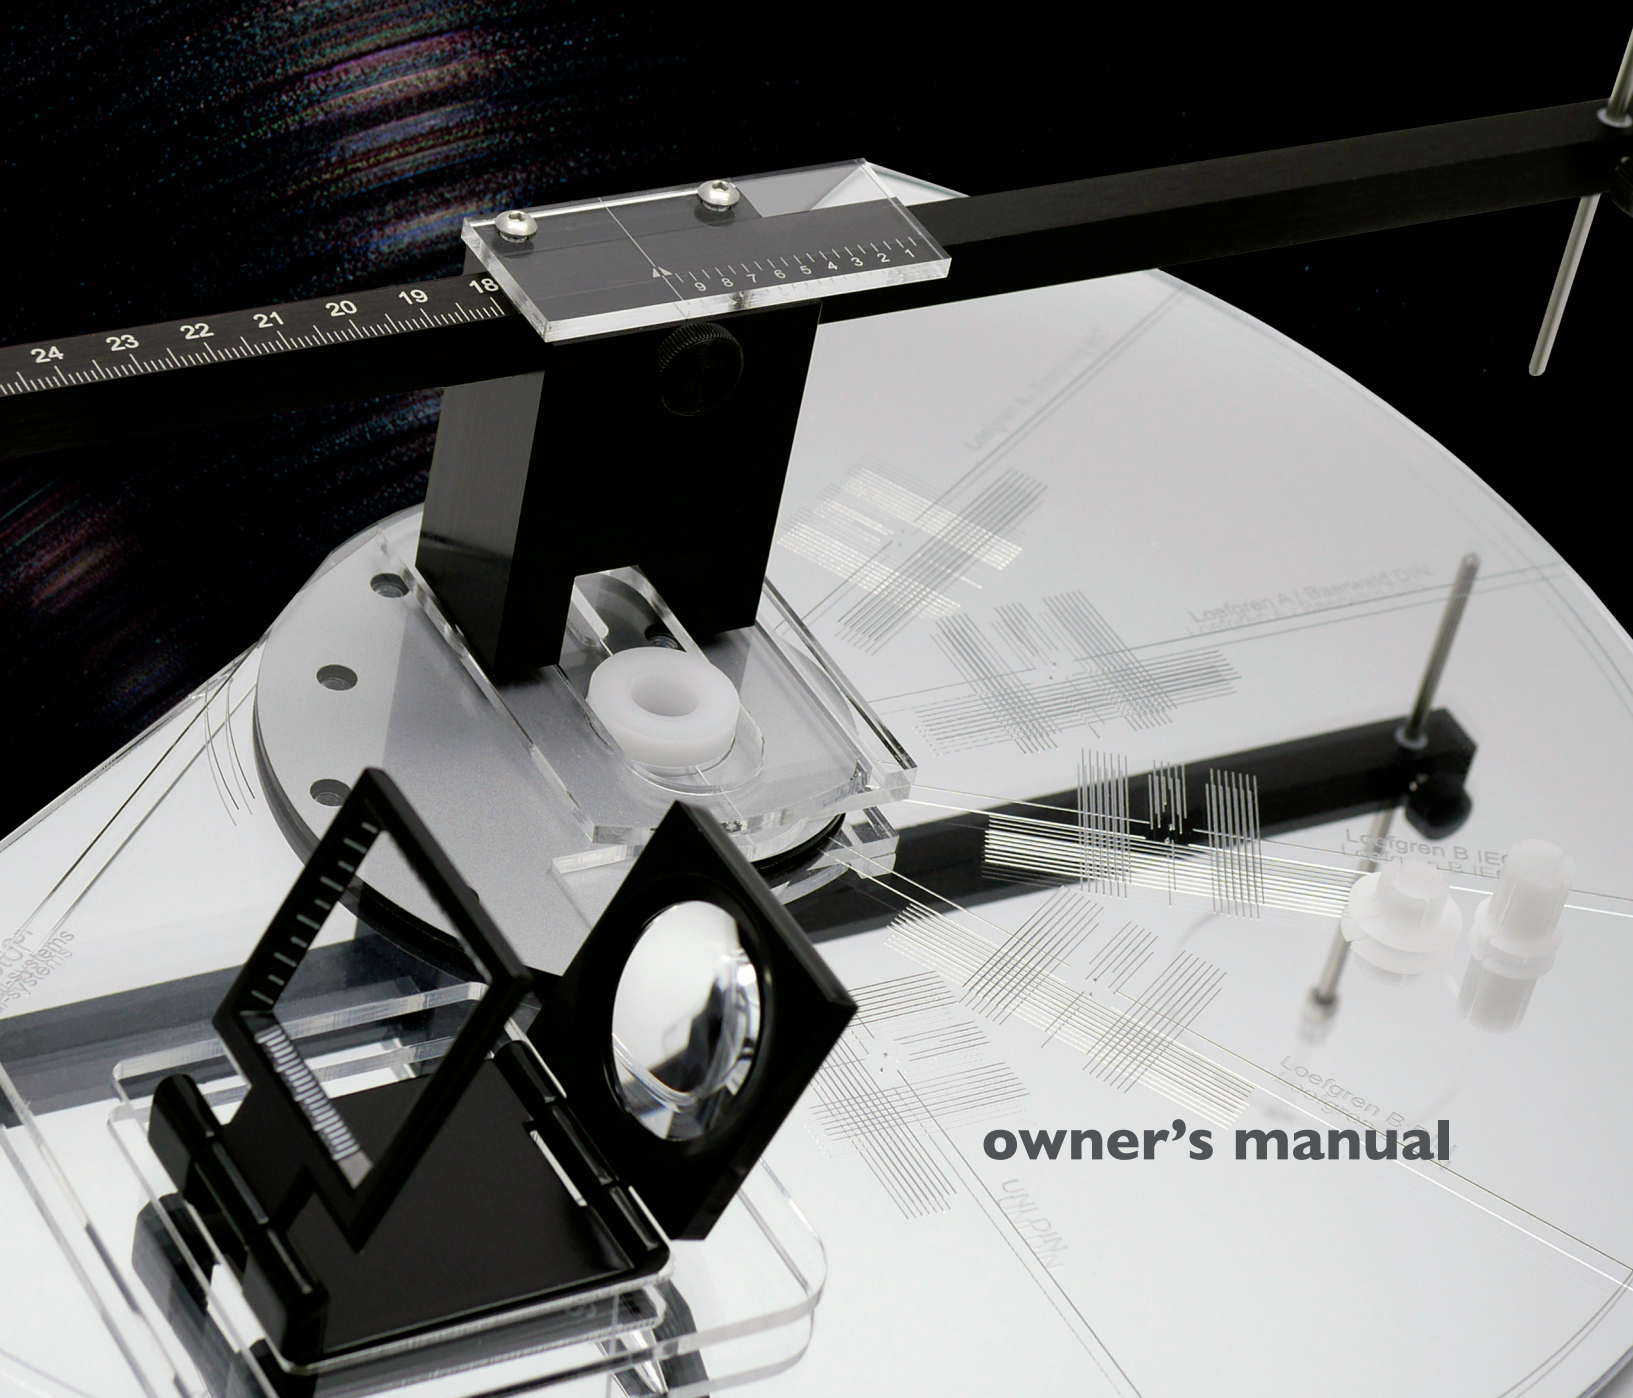

owner's manual

# A brief introduction

The **SMARTractor** is a versatile high-precision positioning and measuring instrument for use with phono tonearms and turntables.

It covers all areas of the geometric tonearm alignment with high precision mechanical accuracy.

*It also allows for precise measurement of Pivot-to-Spindle (P2S) mounting distance - of any given tonearm.*

**SMARTractor** offers true 1-point cartridge alignment to the tonearm, with a **selection of 5 different tangential curves** to choose from.

As the **SMARTractor** operates with true tri-angular positioning, it applies to all pivot tonearms, regardless of the effective length, mounting distance or specific geometry a given tonearm may ask for.

To ensure highly precise measurement, the **SMARTractor** comes with a special designed vernier scale. This **SMARTractor's** vernier scale provides accuracy in read-out of 5/100 mm.

**Precise analog tonearm alignment is impossible without precise centering.**

The **SMARTractor** is supplied with an universal 3-part spindle-adapter to ensure precise fitting on the platter spindle and perfect centering without play.

Please check your **SMARTractor** package to ensure that all contents are included. All the above parts must be included to provide perfect function under all circumstances.

Each **SMARTractor** was carefully checked and tested prior to shipment.

Please do get yourself familiar to the handling and use of the **SMARTractor**.

While it is a mechanical positioning instrument, it needs a minimum of attention to detail by the user to obtain the maximum precise results it ensures if handled correctly.

## Most important:

Please study the step-by-step illustrated instruction to learn how to use and set-up the **SMARTractor** correctly.

To get access to all features of the **SMARTractor** it is inevitable to read this manual.

## DISCLAIMER

Please use all parts with care and attention!

The use of the **SMARTractor** is on your own risk.

Keep out of reach of children.

The **SMARTractor** set contains small parts that can be swallowed!!

The **SMARTractor's** locator pin has a very sharp point and could easily penetrate human skin.

**The manufacturer and the designer do not take any responsibility for possible damage or injury due to operation or handling of the SMARTractor or any of its parts.**

The **SMARTractor** is made from materials that are particularly sensible to heat and bright sunlight.

Please use the **SMARTractor** with the same care as with the proper handling of analog records.

Please clean the mirrored surface of the **SMARTractor** using only a wet soft cloth! We find the best fabric to use is a wet microfiber cloth like those used to clean eyeglasses.

The manufacturer precisely calibrates the **SMARTractor**.

**DO NOT LOOSEN** the screws fixing the Vernier scale on top of the black POM block guiding the measurement scale.

## Unpacking the SMARTractor

The SMARTractor set contains the following parts:

- \* the SMARTractor - completely assembled and calibrated
- \* (1) white universal 3-part spindle-adaptor:  
(1) POM spindle ring 20 mm, (1) 12 mm and (1) 6 mm insert for spindle ring
- \* (1) long stainless steel locator pin with round reticule w/ white engraved crosshair guide
- \* (1) metal frame glass magnifier
- \* (6) small self-adhesive “feet”
- \* (2) M3 20 mm distance bolts
- \* (1) printed manual


The (6) small self-adhesive feet are only needed if the turntable features an convex or concave platter.

In those rare events (Simon Yorke tt or Goldmund Studio TT or Goldmund Relief mat) do use these small feet - 3 at a time - to equalize the SMARTractor relative to the non-flat platter surface.

The (2) 20 mm M3 distance bolts are used **ONLY** when aligning a tonearm with unusual tall bearing housing. The 2 distance bolts will give the SMARTractor an additional 20 mm of height for the positioning arm in those instance where required (for illustration see page 8).

## Selecting the tangential curve

**The SMARTractor offers a total of 5 different tangential curves with which to align a given cartridge and tonearm combination.**

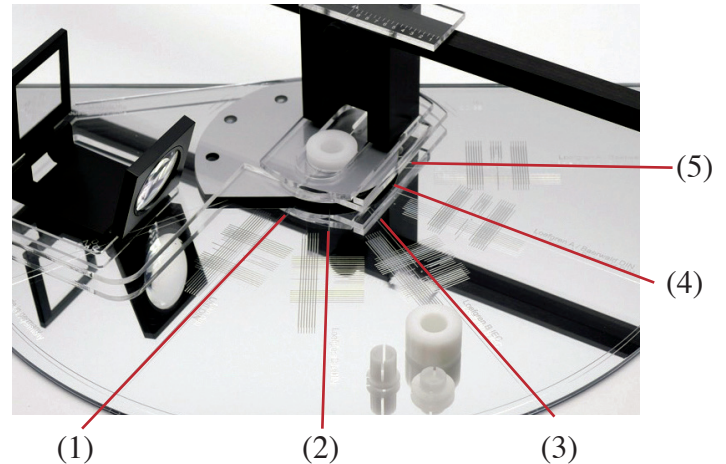

You have the option to align the cartridge using any of these five tangential curves:

- **UNI DIN (1)**
- **Loefgren B DIN (2)**
- **Loefgren B IEC (3)**
- **Loefgren A / Baerwald DIN (4)**
- **Loefgren A / Baerwald IEC (5)**


The selection of the tangential curve depends on your personal preference and on your record collection.

If the majority of your records are rather recent vintage, with production past 1985, we suggest you align to either **Loefgren A / Baerwald IEC or Loefgren B IEC**

If your record collection contains a lot of older records from the beginning of the stereo era to the early 1980ies we strongly recommend aligning to **Loefgren A / Baerwald DIN or UNI DIN**

If your collection features a majority of records with classical music and / or human voices I strongly recommend aligning to **UNI DIN.**

## Setting up the SMARTractor

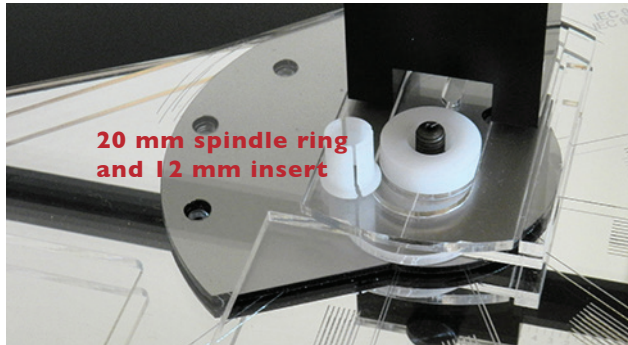


### Step 1

The SMARTractor is already pre-assembled with the 20 mm POM spindle ring (part of the universal 3-part spindle-adapter) sitting in the center of the SMARTractor. First place the SMARTractor - with the 20 mm POM spindle ring - on the spindle.

### Step 2

Now take the **12 mm (tall) or 6 mm (short and wide collar) spindle ring insert\*\*** . Now **SLOWLY** and **CAREFULLY** place it on the top of the spindle and ever so slightly press down.

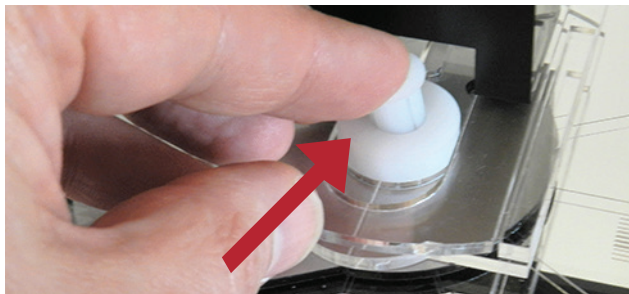

### IMPORTANT - be careful!

#### \*\* 12 mm or 6 mm spindle insert ??

The 12 mm (tall) insert will work with small diameter spindles (smaller than 7.15 mm diameter). The 6 mm (wide) insert will work with 7.2 and wider diameter.


Do not press down the spindle adapter too hard or too deep. On some spindle it will only be 2-3 mm or less. If you press too hard, you will have a very hard time getting the white 20 mm POM ring off your spindle again.

The 12 mm and / or 6 mm spindle adapter insert allows the precise centering of the SMARTractor on a wide range of spindle diameters.

Remember - Please be careful and do not use any excessive force. Pushing down really hard creates a **VERY** tight lock which you will have big problems loosening up again.

## Measuring P2S

### Step 3

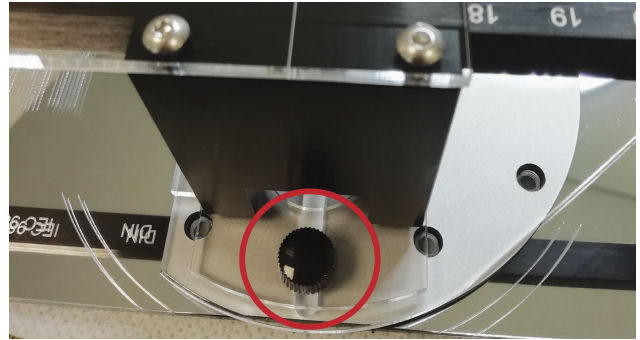


If you want to measure the arm mounting distance or P2S, rotate the central block to the **UNI P2S** position, loosen the locking screw fixing the positioning arm in the black POM block.

The engraved line on the center piece will meet the line at "**UNI P2S**".

Slide the central assembly back or forth so that the hole for the thumbscrew is aligned with the locking thread for the selected curve - there is only 1 possible thread hole to move to in each position.

Fix the assembly in place by re-installing and tightening the thumbscrew. The thumbscrew need only be very snug by hand tension.

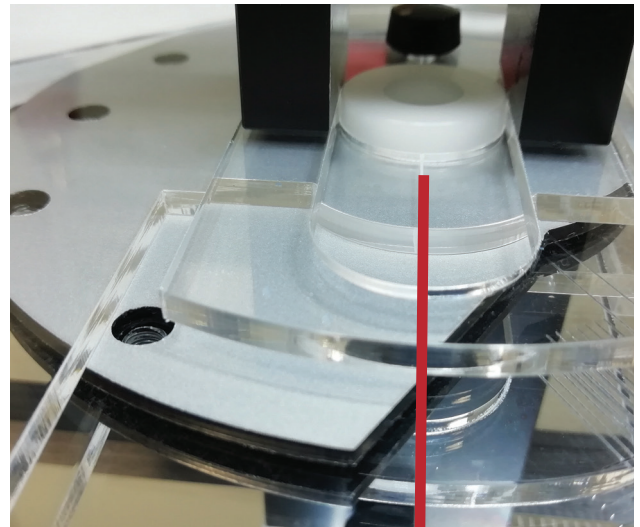


UNI P2S

## Step 4

Mount the long stainless steel locator pin with the reticule either on top or pointing downward into the 3mm-hole at the end of the aluminum positioning arm. Handle with care, as the tip is quite sharp and may cause injuries.

Loosen the front screw on the POM-block. Slide the positioning arm with the locator pin toward the center of the tonearm body.

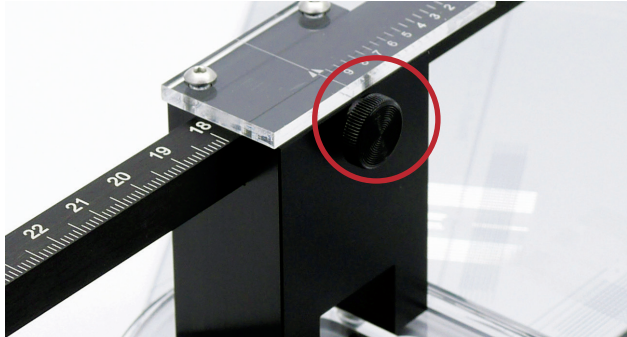

Now carefully pull the positioning arm towards the pivot of the tonearm and place locator pin or reticule right on the pivot of your tonearm. Many tonearms have a small indentation indicating where the exact pivot point is located.


This is ideal for precise positioning of the locator pin on the pivot point.

## Step 5

If you can spot the tonearm pivot, put the pinpoint of the locator pin here. Many tonearms have a small indentation indicating where the exact pivot point is located. This is ideal for precise positioning of the locator pin on the pivot point.

If there is no indication of the tonearm pivot point, attempt to locate pin exactly over the tonearm pivot center.

If unsure of pivot center, use the reticule to visually determine tonearm pivot point by finding symmetrical outer lines on the tonearm body.

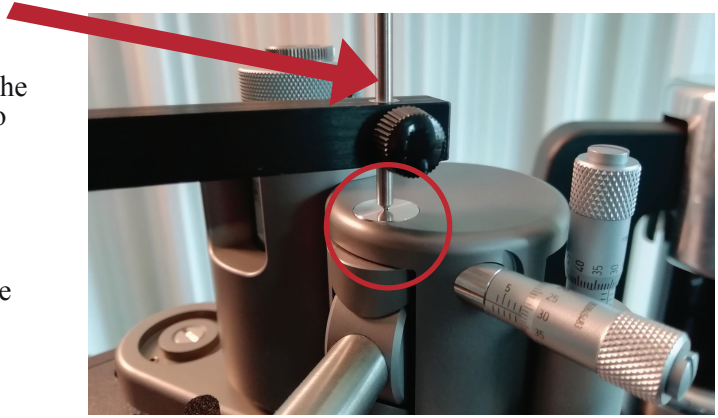

## Step 6

When the pivot point is determined and is directly underneath the pin-point of the locator pin, tighten thumb screw holding the positioning arm in place.

Take care to **NOT** move the SMARTractor in any way until the measurement of P2S valve is finished.

The pinpoint has to be located precisely over the pivot at all times during alignment.

You can fix the SMARTractor in place with clear or painters blue tape by placing tape from the SMARTractor to the side of the platter.

You can now read out the exact value on the Vernier scale.

If unsure, please see **page 6** for a short tutorial how to read the Vernier scale correctly.

**With page 7 we start now with the actual aligning to the tangential curve.**

## Side-kicks:

### Reading the Vernier scale

The SMARTractor features a Vernier scale to allow precise read-out of the P2S with an accuracy of 5/100 mm.

This Vernier scale runs right to left - as does the metric scale with increasing distance of P2S.

If you are unfamiliar with a Vernier scale, please get accustomed to its operation.


The white numbers 1- 9 over the black background are 1/10 of a mm each. The white lines between numbers are 0.5/10 mm each - or 5/100 mm each.

Whenever any of the white lines is absolutely in-line with a black line on the aluminum scale, then it denominates the 5/100 value which has to be added to the full mm value given between the 2 white “leaves” centered by the full vertical white line on the left of the scale just before the half-circle end.


To illustrate the read-out procedure, here are a few examples of mounting distances for common tonearms.

One will become accustomed quite quickly to this way of reading the scale.

The Vernier scale is an international standard in industrial precision analog measuring.

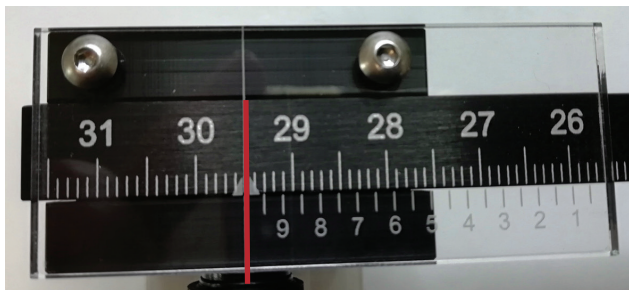

This is 295,00 mm P2S - suitable for a FR-66s.

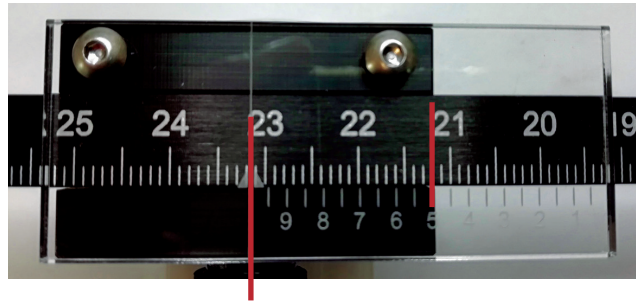

This is 231.5 mm P2S - the white “5” being in line.

BTW: This is the perfect mounting distance for the FR-64s.


### The magnifier

Using the glass magnifier greatly increases the visibility of the stylus when trying to align on the single spot. It further also allows with most modern cartridges to get a fairly good view of the cantilever.

Place the magnifier in the cut-out frame on the clear acrylic positioning arm and pull it all the way forward so that it seats squarely against the clear acrylic.

It is automatically in a position to optimize focus when viewing through the glass lens on the alignment spot for the selected tangential curve.

The cutout for the glass magnifier in the acrylic positioning arm allows for adjusting the side-to-side position of the glass magnifier to accommodate all different positions of the 5 tangential curves on the SMARTractor.

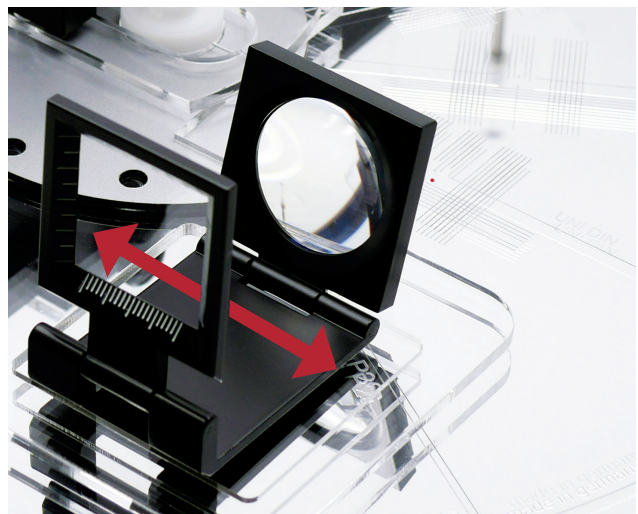

# Aligning the tonearm and cartridge

You can now align your mounted cartridge to your choice of tangential curve (picture see page 3).

Make sure the tracking force on your tonearm is set to an appropriate value for the mounted cartridge.

**IMPORTANT NOTE** Disengage the anti-skating on your tonearm while aligning the cartridge.

## Step 7

Remove the locking screw behind the central POM block (as pictured on page 4 / Step 3) and rotate the complete central assembly to the desired tangential curve.

**Slight in position and fix again with the thumbscrew with normal hand tension.**

Make sure your tonearm is parallel to the platter surface.

Now please undo the **front screw on the central POM block** (as pictured on page 5 / Step 4), so the positioning arm is free to move back and forth.

Please position the steel pin / or the reticule direct above the pivot of your tonearm (as pictured on page 5 / Step 5).

Please do fasten again – light finger force is fine – the thumbscrew on the center block.


### **IMPORTANT NOTE**

*From now on please ignore any value on the positioning beam. Whatever it „shows“ now will differ from what you read out before in the „UNI-P2S“ position when measuring the pivot to spindle distance.*

*That „difference in value“ is correct.*

*The positioning beam now is just that: a positioning beam. We no longer „read“ the P2S value now, as the positioning arm is no longer above the spindle.*

Slide the tonearm with the mounted cartridge towards the single alignment spot of the selected tangential curve. It is surrounded by lines to ease adjustment and precise view.

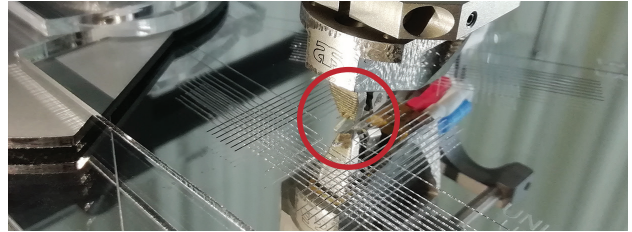

## Step 8

Now guide the head of the tonearm with the mounted cartridge over the „sweet spot“ of the tangential curve. That sweet spot is surrounded by supporting lines as well as lines „behind“ the sweet spot to ease alignment of the cantilever.

## Step 9

By carefully undoing the mounting screws just a little bit and then shifting the cartridge's body ever so gently you ensure that the stylus is directly ABOVE the sweet spot.

Now you can cue down the arm lift and lower the stylus onto the sweet spot.

**IMPORTANT** Any shifting or twisting of the cartridge's body in the headshell should be done **ONLY** when the tonearm is lifted up with the cueing device.

**NEVER** make any changes to the position while the stylus is lowered onto the SMARTractor!

When the stylus is precisely sitting on the single spot, use the helping lines to ensure that the cantilever is perpendicular to the SMARTractor surface when viewed from the front.

Adjust the cartridge accordingly until the cantilever is visually in this position. If you have a Uni-Pivot design tonearm, it is critical that the table is level before carry out this step.

Using the glass magnifier will dramatically increase visibility of the alignment.

**IMPORTANT NOTE** Don't forget to retighten the mounting screws after final position is obtained.

## Step 10

Make sure that the stylus is precisely located on the spot with the helping lines straight with the cantilever – making sure that the locator pin is still exactly positioned over the pivot.

When you are sure that the stylus is precisely located on the spot with the helping lines in line with the cantilever the tangential alignment to the selected tangential curve is finished.

Please demount the SMARTractor and carefully place it back in its package.

Do engage antiskating again and continue with aligning azimuth, tracking force and SRA / VTA.


Here the **SMARTstylus** tool is most helpful to get accurate settings very quick.



For further information please ask your dealer.

In the rare event that you have to align a tonearm featuring by design an unusual height of the tonearm body, you can simply use the (2) M3 distance bolts supplied with the SMARTractor and mount them between the POM block and the clear acrylic sliding plate.

You won't need any additional tools for this and it is just a 1- minute routine, which is reversible at any time.

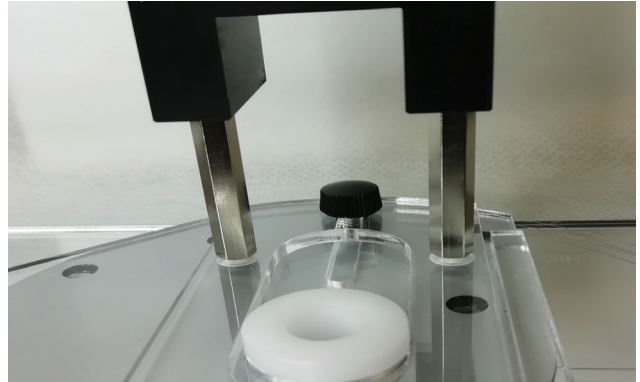

### General note:

*Technical data and specifications are subject to change without prior notice.*

Designed, manufactured and assembled in Germany

acoustical systems,  
Axinia Schäfer  
Am Büchele 2  
86928 Hofstetten  
Germany

[www.acoustical-systems.com](http://www.acoustical-systems.com)  
[info@acoustical-systems.com](mailto:info@acoustical-systems.com)



\*\*October 2020